

## Technical bulletin

---

## TB-063

**Do not remove the pulley's protective cover!**



When mounting the unit onto the vehicle, make sure the protective cover remains on the pulley. Its function of the cover is to protect the internal clutch, preventing water/dust/debris ingress. If the cover is removed, it could result in premature failure.

**Without the protective cover a warranty claim is considered invalid!**