



Remy Europe



## Technical bulletin

---

**TB-037**

When exchanging the pump from the old to the new unit  
– ensure the oil seal is clean.

The alternator will be damaged if oil is allowed to leak into the unit.

When fitting the pump, ensure that the mating surfaces are clean and a new seal is installed.

Check for leaks after installation.